## **OPERATING MANUAL**

# **Rus**Automation

### SHDLR / SHD2LR

#### OPERATING MANUAL

Heavy Duty LED Revolving Warning Light with Phone

Thank you for purchasing Q.Light product. Please read this manual carefully before installing this system for safe and long use of the product.

#### 1 Product Feature

- Aluminum housing product with long shelf-life of light source by employing high-brightness LED.
- Excellent in diffusing signal light by employing unique direct-diffusion system.
- Material : Lens-PC, Protection Cage(Option)-SUS316L Body-DIECAST AL, Horn Housing-SUS316L,
- RPM : 120-140/Min.(Controllable) Protection Class : IP56
- Volume : SHDLR 113-118dB(1m), SHD2LR 113-118dB x 2(1m)


2 Specification & External View Drawing

#### 1) SHDLR

#### Product Specification

Model	Rated Voltage	Current	Weight	RPM	Color
SHDLR	DC12V	1.295A	3.21Kg	120-140/Min.	Red-R Amber-A Green-G Blue-B
	DC24V	1.052A	3.21Kg		
	AC110V	0.233A	3.91Kg		
	AC220V	0.111A	3.91Kg		

#### External View Drawing

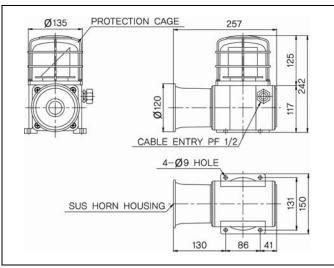


#### 2) SHD2LR

#### Product Specification

Model	Rated Voltage	Current	Weight	RPM	Color
SHD2LR	DC12V	2.365A	4.26Kg	- 120-140/Min.	Red-R Amber-A Green-G Blue-B
	DC24V	1.982A	4.26Kg		
	AC110V	0.409A	4.97Kg		
	AC220V	0.194A	4.97Kg		

#### External View Drawing

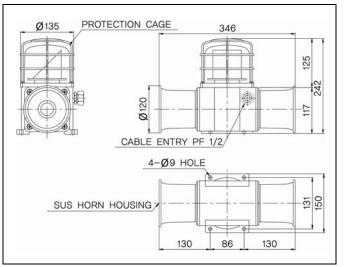

#### 3 Sound Tone Specification

Туре	Main Built-in Sound	СН	Sound Tone	Volume
WS	5 Warning Sounds	ch1 ch2 ch3 ch4 ch5	Fire A-ANG(Wail) Emergency WA-U(Yelp) Ambulance PI-PO(High-Low) Machinery Fault( PI-PI-PI-) Foam Release Alarm (PI~Continuous)	118dB (SHDLR) 118dB x 2 (SHD2LR)
WP	5 Special Warning Sounds	ch1 ch2 ch3 ch4 ch5	Abandon Alarm Machinery Fault(PI-PI-PI-) Foam Release Alarm (PI~Continuous)	118dB (SHDLR) 118dB x 2 (SHD2LR)
WM	5 Melodies	ch1 ch2 ch3 ch4 ch5	For Elise Cuckoo's Waltz	118dB (SHDLR) 118dB x 2 (SHD2LR)
WA	5 Alarms	ch1 ch2 ch3 ch4 ch5	Door Chime	116dB (SHDLR) 116dB x 2 (SHD2LR)
WV	3 Voice Signals	ch1 ch2 ch3	Reproduction of Voice Recording 3 Channels	113dB (SHDLR) 113dB x 2 (SHD2LR)


1

454010 Россия, Челябинск, Гагарина 5, тел. 8 800 775 09 57 (звонок бесплатный), +7(351)799 54 26, тел./факс +7(351)211 64 57, info@rusautomation.ru, www.rusautomation.ru, русавтоматизация.рф

## **OPERATING MANUAL**



4 Structure Drawing

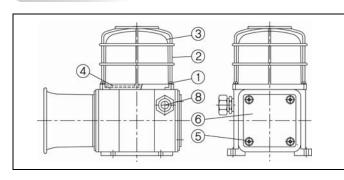

#### 5 Revolving Speed Control


This product has a volume(1) for controlling revolving speed on assembling board. Refer to above structure drawing together with below drawing and explanation for right operating.

#### 1) Lens(Protection Cage) Removal

Remove Protection Cage2 and Lens3 from the product by loosening bolt(M4-4EA)1 and make sure assembling board4.

#### 2) Revolving Speed Control

- The volume(1) for revolving speed control is built-in this product. Turn it closckwise for increasing revolving speed and turn it counterclockwise for decreasing revolving speed.
- If give excess power to the volume, it can be broken.
  Be careful !

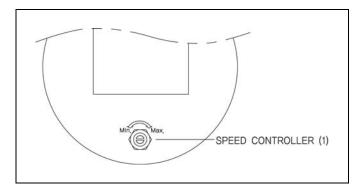

#### 3) Lens(Protection Cage) Assembling

Assemble the lens(or Lens and Protection Cage) in reverse order of separating.

Sound Tone Selection, Volume Control, Wiring

Refer to structure drawing together with below drawing and explanation for right operating.

#### 1) Body Cover Removal

Remove body cover<sup>®</sup> by loosening body cover bolt(M5 4EA)<sup>®</sup>

and make sure related parts on phone control board.

#### 2) Sound Tone Selection

- 5 Warning sound tones are built-in this product. In case of standard product, select preferable sound tone by using internal sound tone selection switch(S1).
- In case of LC Type(Custom-Made) product, refer to below explanation and drawing.

#### 3) Volume(dB) Control

• Volume controller(S2) is built-in this product. Turn it clockwise for increasing volume or turn it counterclockwise for decreasing volume

#### 4) Wiring Power Line

- Make sure terminal plate⑦ inside the body of the product.
- Treat the end of power cable by using "O" or "U" type terminal for safe wiring.
- Connect power cable to terminal plate.
- In case of product using AC voltage, connect the line without polarity(wire color).
- In case of product using DC voltage, black line is negative(-).

#### ■ Wiring for LC(External Contact) Type – Custome Made

- In case of LC type which selets sound tone by external contact, power line and signal line come out. Connect each line as below.
- Power Line : UL1015-NO.16(1.25sq) x 2C 400mm
- Signal Line : UL1007-NO.22(0.3sq) 400mm
- In case of product using AC voltage, do not allow power supply either to common line or to signal line.



- Keep the tightness of power entry<sup>®</sup> by using water-proof connector(flexible connector #16 is supplied as a standard specification) or cable grand.
- Product can be damaged by water or dust if the cable entry is exposed outdoor without airtightening.

2

#### 6) Body Cover Assembling

Assemble the body cover in reverse order of separating.

ООО "РусАвтоматизация"


454010 Россия, Челябинск, Гагарина 5, тел. 8 800 775 09 57 (звонок бесплатный), +7(351)799 54 26, тел./факс +7(351)211 64 57, info@rusautomation.ru, www.rusautomation.ru, русавтоматизация.рф

## **OPERATING MANUAL**



#### Mounting

- This product is water-proof and anti-corrosion type for outdoor use. But, install with vertical direction at a place or machine where exists no big vibration and no strong impact as long as possible.
- Refer to below information and drill necessary mounting holes on profitable part of the product.
- (Make sure PCD from external view drawing.)
- Fix the product by using mounting bolt(M8-4EA).

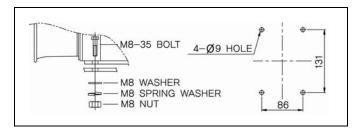

#### 8 Caution

- This product is explosion-proof, water-proof and anti-corrosion type. When separate and assemble the product for wiring, repair or check, keep the airtightnees of the product by tightening each bolt and nut.
- If using voltage is seriously higher or lower than rated voltage, it can reduce the self-life of the product or can cause a problem on product operating. Make sure the using voltage does not exceed + /- 5% of the rated voltage.
- If lens or body of the product is contaminated by chemicals such as thinner, benzene, the product can be damaged, discolored or deformed. Please be careful.
- Keep airtightness of cable entry by using water-proof cable grand or water-proof connector. Product can be damaged by water or dust if the cable entry is exposed outdoor without airtightening
- Do not give strong impact to the product. It can be a reason of part(s) damage or short circuit.
- Do not strongly pull the wire out from the product. It can cause a disorder.

#### 9 Troubleshooting

Situation	Main Cause	Solution	
Non- Lighting Partly	LED is Partly Damaged Supplying Higher Voltage than Rated Voltage	Making Sure Using Voltage	
Feeble Lighting	Supplying Voltage Lower Than Rated Voltage	Making Sure Using Voltage	
Low Revolving Speed	Wrong Selecting Voltage Select on Switch to 220V (In Case of AC Type)	Selecting Voltage Selection Switch to 110V	
	Short Circuit of Sound Tone Signal Line	Making Sure Wiring	
Double Sound Tone	Problem with Sound Tone Selection Switch	Contact Q.Light or Their Agent	
	Wrong Wiring	Making Sure Wiring	
No Sound	Problem with Horn	Contact Q.Light or Their Agent	
Neither Lighting nor	Wrong Wiring	Making Sure Wiring	
Revolving	No Power Supply	Making Sure Power Supply	

#### For A/S & Information on Porduct

#### Q-LIGHT CO., LTD.

http://www.qlightkr.com E-mail : qlightkr@qlightkr.com Seoul Office (Domestic Sales & A/S) Tel) 02-2679-6152 Ansung BD A-312, 410-13 Sindorim-Dong, Guro-Gu, Seoul Overseas Marketing Team / Plant Tel) 055-328-4082 Fax) 055-328-4083 Plant #1 : 178-1 Woogye-Ri, Sangdong-Myun, Kimhae-Si, KyungNam, Korea Plant #2 : 417-1 Geumsa-Dong, Geumjung-Gu, Busan

3