



Installation instructions  
Electronic absolute pressure sensor  
for industrial applications


**UK**

**efectorsoo<sup>®</sup>**

**PT05xx**

02 / 2016

14154628

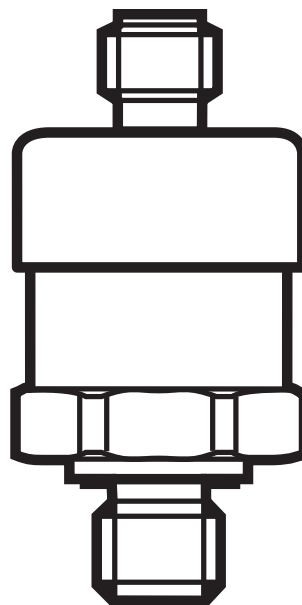

# Contents

1 Preliminary note.....	2
2 Safety instructions .....	2
3 Functions and features .....	3
3.1 Applications .....	3
4 Functions .....	4
5 Installation.....	4
6 Electrical connection.....	5

## 1 Preliminary note

### Symbols used

▶ Instructions

→ Cross-reference



Important note

Non-compliance can result in malfunction or interference.



Information

Supplementary note.

## 2 Safety instructions

- Please read this document prior to set-up of the unit. Ensure that the product is suitable for your application without any restrictions.
- If the operating instructions or the technical data are not adhered to, personal injury and/or damage to property can occur.
- Improper or non-intended use may lead to malfunctions of the unit or to unwanted effects in your application. That is why installation, electrical connection, set-up, operation and maintenance of the unit must only be carried out by qualified personnel authorised by the machine operator.
- In order to guarantee the correct condition of the device for the operating time it is necessary to use the device only for media to which the wetted materials are sufficiently resistant (→ Technical data).

- The responsibility whether the measurement devices are suitable for the respective application lies with the operator. The manufacturer assumes no liability for consequences of misuse by the operator. Improper installation and use of the devices result in a loss of the warranty claims.

## 3 Functions and features

The pressure sensor detects the system pressure and converts it into an analogue output signal.

### 3.1 Applications

- Type of pressure: absolute pressure



You can find the technical data such as measuring range, pressure rating and bursting pressure in the corresponding technical data sheet → [www.ifm.com](http://www.ifm.com).



Avoid static and dynamic overpressure exceeding the specified overload pressure by taking appropriate measures.

The indicated bursting pressure must not be exceeded.

Even if the bursting pressure is exceeded only for a short time, the unit may be destroyed. **ATTENTION: Risk of injury!**




**Pressure Equipment Directive (PED):**

Units comply with the Pressure Equipment Directive and are designed and manufactured for group 2 fluids in accordance with the sound engineering practice.

Use of group 1 fluids on request!

## 4 Functions

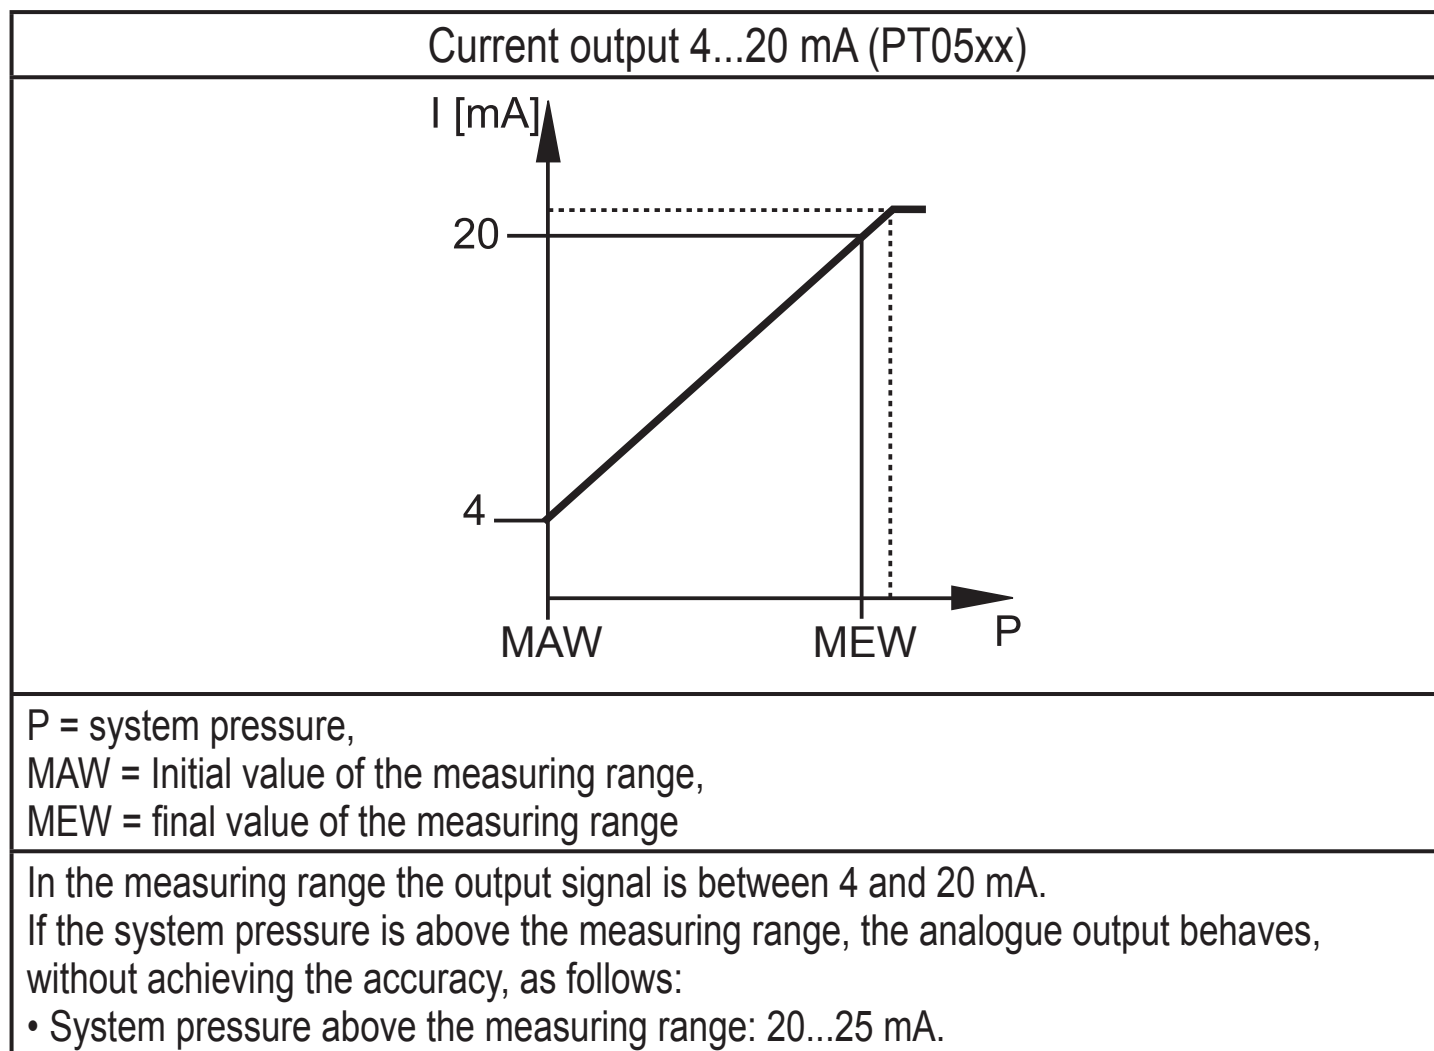

## 5 Installation



Before installing and removing the unit: make sure that no pressure is applied to the system.

- ▶ Insert the unit in a G ¼ process connection.
- ▶ Tighten firmly. Recommended tightening torque: 25...35 Nm  
Depends on lubrication, seal and pressure load!

## 6 Electrical connection



The unit must be connected by a qualified electrician.

The national and international regulations for the installation of electrical equipment must be adhered to.

Voltage supply to EN 50178, SELV, PELV.

- ▶ Disconnect power.
- ▶ Connect the unit as follows:

### PT05xx (4...20 mA analogue)

Core colours			
BN	brown		
WH	white		
		OUT: analogue output 4...20 mA Colours to DIN EN 60947-5-2	
<b>Example circuit</b>			

UK

#### ООО "РусАвтоматизация"

454010 г. Челябинск, ул. Гагарина 5, оф. 507

тел. 8-800-775-09-57 (звонок бесплатный), +7(351)799-54-26, тел./факс +7(351)211-64-57

[info@rusautomation.ru](mailto:info@rusautomation.ru); [русавтоматизация.рф](http://rusавтоматизация.рф); [www.rusautomation.ru](http://www.rusautomation.ru)