

# Switching Mode Power Supply SPB SERIES

## INSTRUCTION MANUAL



Thank you for choosing our Autonics product.  
Please read the following safety considerations before use.

### ■ Safety Considerations

※Please observe all safety considerations for safe and proper product operation to avoid hazards.

※⚠ symbol represents caution due to special circumstances in which hazards may occur.

**⚠ Warning** Failure to follow these instructions may result in serious injury or death.

**⚠ Caution** Failure to follow these instructions may result in personal injury or product damage.

### ⚠ Warning

1. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)

2. Install on the DIN rail, and ground to the F.G. terminal separately.

3. Do not connect, repair, or inspect the unit while connected to a power source.

4. Check 'Wiring Diagram' before wiring.

5. Do not disassemble or modify the unit.

### ⚠ Caution

1. When connecting the F.G. terminal, use AWG 14 (2.1mm<sup>2</sup>) cable or over and tighten the terminal screw with a tightening torque of 0.7 to 0.9N·m.  
When connecting the F.G. terminal of SPB-015/030 model, tighten the terminal screw with a tightening torque of 0.3 to 0.5N·m.

2. Use the unit within the rated specifications.  
Failure to follow this instruction may result in shortening the damage.

3. Use dry cloth to clean the unit, and do not use water or organic solvent.  
Failure to follow this instruction may result in electric shock

4. Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.

5. Keep metal chip, dust, and wire residue from flowing into the unit.

6. Do not touch the product during operation or for a certain period of time after stopping.  
Failure to follow this instruction may result in burns.

7. Upon occurrence of an error, disconnect the power source.

### ■ Ordering Information

SPB - 120 - 24	5	5VDC
	12	12VDC
	24	24VDC
	48	48VDC
	015	15W
	030	30W
	060	60W
	120	120W
	180	180W
	240	240W
Item	SPB	Switching Mode Power Supply

※The above specifications are subject to change and some models may be discontinued without notice.


※Be sure to follow cautions written in the instruction manual and the technical descriptions (catalog, homepage).

### ■ Specifications


Model	SPB -015-05	SPB -015-12	SPB -015-24	SPB -030-05	SPB -030-12	SPB -030-24	SPB -060-12	SPB -060-24	SPB -060-48	SPB -120-12	SPB -120-24	SPB -120-48	SPB -180-24	SPB -180-48	SPB -240-12	SPB -240-24	SPB -240-48			
Output power	15W	15.6W	25W	30W	31.2W	60W	62.4W	96W	120W	180W	182.4W	240W								
Voltage <sup>※1</sup>	100-240VAC~ (permissible voltage: 85-264VAC~/120-370VDC~)																			
Frequency <sup>※2</sup>	50/60Hz																			
(Typical)	100VAC~	77%	80%	83%	77%	82%	84%	81%	84%	85%	82%	85%	85%	89%	89%	87%	89%	89%		
240VAC~	76%	79%	82%	78%	83%	85%	83%	86%	87%	85%	88%	88%	92%	92%	90%	92%	92%			
Power factor <sup>※2</sup>	—																			
Max. current consumption <sup>※2</sup>	0.4A			0.8A			1.6A			1.9A			3.0A			3.8A				
Current consumption <sup>※2</sup>	100VAC~	0.35A	0.35A	0.34A	0.56A	0.63A	0.63A	1.24A	1.21A	1.19A	1.19A	1.49A	1.43A	2.03A	2.04A	2.76A	2.71A	2.73A		
(Typical)	240VAC~	0.19A	0.19A	0.19A	0.30A	0.35A	0.35A	0.66A	0.65A	0.64A	0.52A	0.61A	0.61A	0.83A	0.84A	1.14A	1.12A	1.13A		
Power factor correction circuit	—																			
Voltage	5VDC	12VDC	24VDC	5VDC	12VDC	24VDC	12VDC	24VDC	48VDC	12VDC	24VDC	48VDC	24VDC	48VDC	12VDC	24VDC	48VDC			
Current	3A	1.3A	0.65A	5A	2.5A	1.3A	5A	2.5A	1.3A	8A	5A	2.5A	7.5A	3.8A	20A	10A	5A			
Voltage adjustment range <sup>※3</sup>	Max. ±10%																			
Input variation <sup>※4</sup>	Max. ±0.5%																			
Load variation	Max. ±1%																			
Ripple&Ripple noise <sup>※2,※5</sup>	Max. ±1.5%																			
Start-up time <sup>※2</sup>	100VAC~	500ms	550ms	650ms	600ms	550ms	550ms	520ms	550ms	1200ms	1200ms	1200ms	1200ms	1200ms	1200ms	87ms	75ms	87ms	75ms	
(Typical)	240VAC~	550ms	550ms	650ms	600ms	550ms	550ms	530ms	550ms	400ms	400ms	400ms	400ms	400ms	400ms	56ms	45ms	45ms	45ms	
Hold time <sup>※2</sup>	100VAC~	24ms	25ms	25ms	20ms	25ms	15ms	15ms	15ms	15ms	14ms	15ms	98ms	75ms	87ms	36ms	25ms	33ms	36ms	25ms
(Typical)	240VAC~	190ms	190ms	190ms	130ms	110ms	110ms	100ms	110ms	108ms	97ms	43ms	86ms	36ms	25ms	33ms	36ms	25ms		
Inrush current protection (Typical)	100VAC~	7A	7A	7A	7A	7A	6A	13A	14A	10A	9A	11A	10A	8A	8A	8A	8A	8A		
240VAC~	32A	30A	31A	29A	31A	29A	19A	17A	37A	37A	36A	37A	25A	26A	22A	25A	26A			
Over-current protection <sup>※5</sup>	105 to 160%																			
Over-voltage protection <sup>※3</sup>	—																			
Output low-voltage indicate	4.2V ±10%	9.6V ±10%	20.0V ±10%	4.2V ±10%	9.6V ±10%	20.0V ±10%	9.6V ±10%	20.0V ±10%	43.0V ±10%	9.6V ±10%	20.0V ±10%	43.0V ±10%	20.0V ±10%	43.0V ±10%	10.0V ±10%	20.0V ±10%	43.0V ±10%			
Indicator	Output indicator: green LED, output low-voltage indicator: red LED																			
Insulation resistance	Over 100MΩ (at 500VDC megger between all input and output terminals)																			
Dielectric strength	3,000VAC 50/60Hz for 1 min (between all input and output terminals)																			
Vibration	1,500VAC 50/60Hz for 1 min (between all input terminals and F.G.)																			
Shock	0.75mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 times																			
EMS	300m/s <sup>2</sup> (approx. 30G) in each X, Y, Z direction for 3 times																			
EMI	Conforms to EN61000-6-2																			
Safety standards	Conforms to EN61000-6-4																			
Environment	EN60950, EN50178																			
Ambient temperature <sup>※6</sup>	-10 to 50°C, storage: -25 to 65°C (surrounding air temp.: max. 40°C)																			
Ambient humidity	25 to 85%RH, storage: 25 to 90%RH																			
Input cable	AWG24 to 19 (material: Cu)			AWG24 to 19 (material: Cu)			AWG21 to 19 (material: Cu)			AWG21 to 19 (material: Cu)			AWG21 to 19 (material: Cu)			AWG18 to 16 (material: Cu)				
Terminal tightening torque	0.3 to 0.5N·m			0.3 to 0.5N·m			0.7 to 0.9N·m			0.7 to 0.9N·m			0.7 to 0.9N·m			0.7 to 0.9N·m				
Protection structure	IP20 (IEC standard)																			
Approval	CE, UL, VDE, etc.																			
Weight <sup>※7</sup>	Approx. 202g (approx. 129g)			Approx. 249g (approx. 176g)			Approx. 347g (approx. 274g)			Approx. 570g (approx. 466g)			Approx. 609g (approx. 505g)			Approx. 866g (approx. 736g)				

※1: Since there is no separate input overvoltage protection for the voltage over the rated input voltage range, supplying overvoltage may result in product damage.  
 ※2: It is for 100% load.  
 ※3: Use the output voltage adjusting volume within the voltage variable range.  
 ※4: It is for the rated input voltage 100-240VAC (85-264VAC) and 100% load.  
 ※5: Refer to 'Output Derating Curve by Ambient Temperature'.  
 ※6: Refer to 'Output Derating Curve by Ambient Temperature'.  
 ※7: The weight includes packaging. The weight in parenthesis is for unit only.


### ■ Dimensions

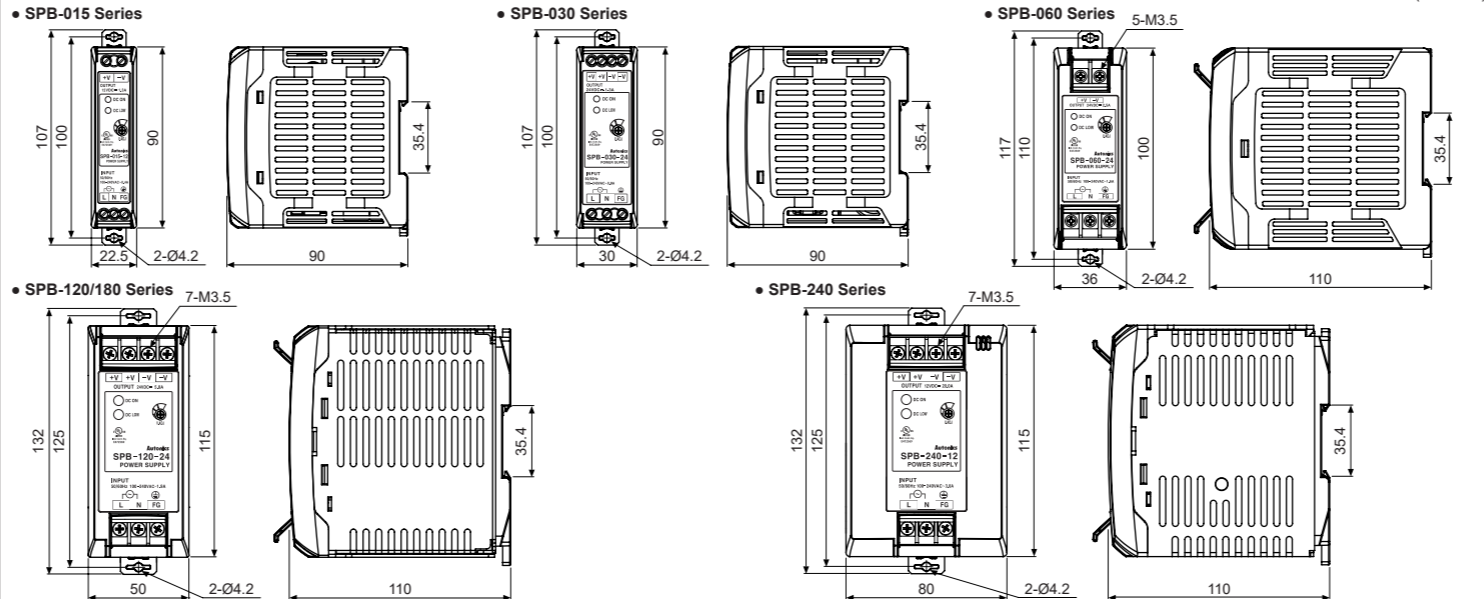

### ■ Installation

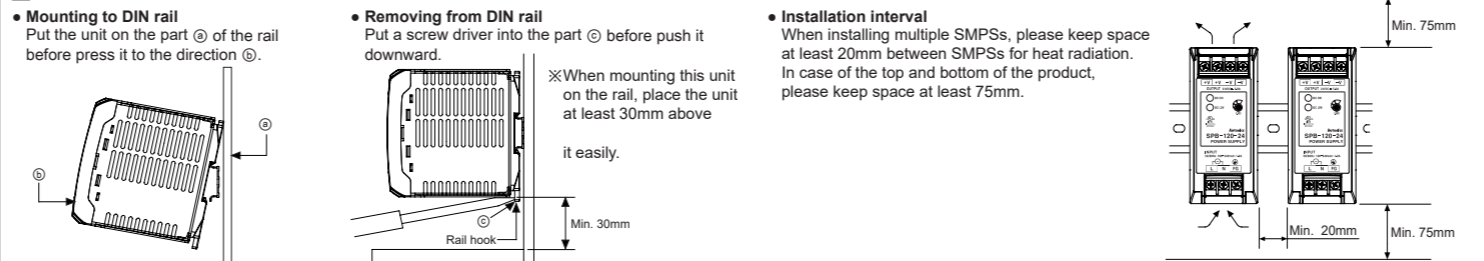


### ■ Wiring Diagram/Unit Description

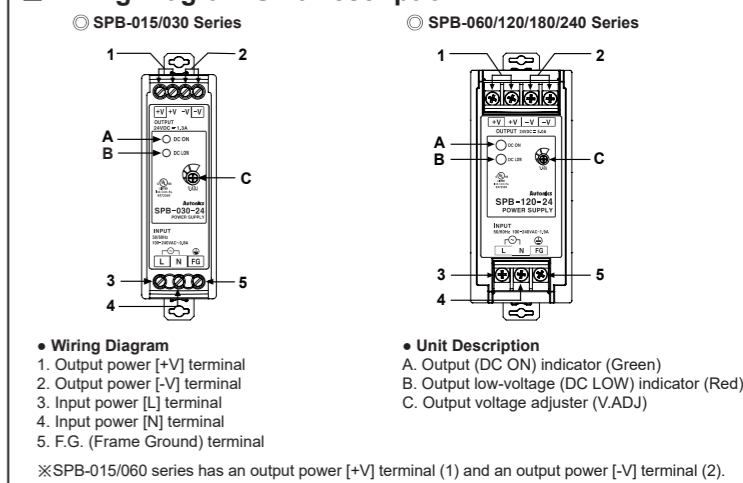

### ■ Over-Heating Protection

The overheat protection function cuts off the output voltage, when the temperature in an element increases due to overheating. This product has the overheat protection function within itself. When the overheat protection function is activated and the product does not work properly, please resupply power.

### ■ Output Derating Curve by Ambient Temperature

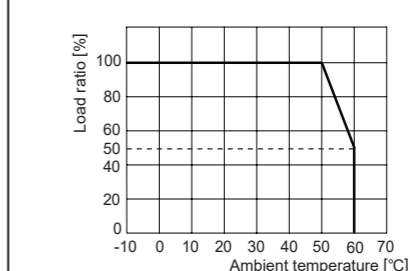

### ■ Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Do not connect the output voltage neither in serial nor in parallel.
- Since SPB-015/030/060 models have no harmonic suppression or power factor correction circuit, install the circuit separately if necessary.
- Since SPB-015/030/060 models use the condenser input method, power factor is in the range of 0.4 to 0.6. When using distribution board or transformer, check the capacity of the input voltage.  

$$\text{Input apparent power [VA]} = \frac{\text{Output active power [W]}}{\text{Power factor}}$$
- depending on the installation location or wiring
- If the internal fuse is damaged, please contact our A/S center.
- To ensure the reliability of the product, install the product on the panel or metal surface vertically to the ground.
- Install the unit in the well ventilated place.
- Do not use near the equipment which generates strong magnetic force or high frequency noise.
- This unit may be used in the following environments.
  - Ⓐ Altitude max. 2,000m
  - Ⓑ Pollution degree 2
  - Ⓒ Installation category II

### ■ Major Products

- Photoelectric Sensors
- Fiber Optic Sensors
- Door Sensors
- Door Side Sensors
- Area Sensors
- Proximity Sensors
- Pressure Sensors
- Rotary Encoders
- Connectors/Sockets
- Switching Mode Power Supplies
- Control Switches/Lamps/Buzzers
- I/O Terminal Blocks & Cables
- Stepper Motors/Drivers/Motion Controllers
- Graphic/Logic Panels
- Field Network Devices
- Laser Marking System (Fiber, Co., Nd:YAG)
- Laser Welding/Cutting System
- Temperature Controllers
- Temperature/Humidity Transducers
- SSRs/Power Controllers
- Counters
- Timers
- Panel Meters
- Tachometers/Pulse (Rate) Meters
- Display Units
- Sensor Controllers

ООО "РусАвтоматизация"  
 454010 г. Челябинск, ул. Гагарина 5, оф. 507  
 тел. 8-800-775-09-57 (звонок бесплатный),  
 тел.: (351)799-54-26, тел./факс (351)211-64-57  
 info@rusautomation.ru; www.rusautomation.ru  
 русавтоматизация.pdf