DRW171506AB

# Rectangular Inductive Long-Distance **Proximity Sensors**



#### For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

#### **Major Features**

- Excellent noise immunity with specialized sensor IC
- Built-in surge protection circuit, output short over current protection circuit, reverse
- Power supply: 12-48 VDC== (operating voltage: 10-65 VDC==)
- Simultaneous output (Normally Open + Normally Closed)
- · Power indicator (greed LED) and operation indicator (red LED)
- IP67 protection structure (IEC standard)



#### **Safety Considerations**

**Autonics** 

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards
- ▲ symbol indicates caution due to special circumstances in which hazards may occur.

Marning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in personal injury, economic loss or
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.

ailure to follow this instruction may result in explosion or fire.

**03.** Do not disassemble or modify the unit. Failure to follow this instruction may result in fire

04. Do not connect, repair, or inspect the unit while connected to a power

Failure to follow this instruction may result in fire.

05. Check 'Connections' before wiring.

Failure to follow this instruction may result in fire.

⚠ Caution Failure to follow instructions may result in injury or product damage.

- 01. Use the unit within the rated specifications.
- Failure to follow this instruction may result in fire or product damage.

  1. See a dry cloth to clean the unit, and do not use water or organic solvent. Failure to follow this instruction may result in fire.

#### **Cautions during Use**

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents
- 12-48 VDC == power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Use the product, after 0.8 sec of supplying power.
- $\bullet$  Wire as short as possible and keep away from high voltage lines or power lines, to prevent surge and inductive noise. Do not use near the equipment which generates strong magnetic force or high frequency noise (transceiver, etc.). In case installing the product near the equipment which generates strong surge (motor, welding machine, etc.), use diode or varistor to remove surge.
- This unit may be used in the following environments.
   Indoors (in the environment condition rated in 'Specifications')
  - Altitude max. 2,000 m
- Pollution degree 2 Installation category II

#### **Cautions for Installation**

- · Install the unit correctly with the usage environment, location, and the designated
- Do NOT impacts with a hard object or excessive bending of the wire lead-out. It may cause damage the water resistance.
- Do NOT pull the Ø 2.5 mm cable with a tensile strength of 20 N, the Ø 4 mm cable with a tensile strength of 30 N or over and the Ø 5 mm cable with a tensile strength of 50 N or over. It may result in fire due to the broken wire
- When extending wire, use AWG 22 cable or over within 200 m.
- $\bullet$  Tighten the installing screws with under 1.47 N m torque.

## **Ordering Information**

This is only for reference.

For selecting the specific model, follow the Autonics web site.

#### ① Control output


N3: NPN Normally Open + Normally Closed P3: PNP Normally Open + Normally Closed


## **Product Components**

- Bracket  $\times$  1
- M5 Bolt × 4

## Connections


## ■ Cable type

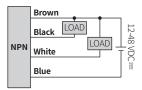


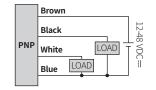

## ■ Inner circuit (NPN output)



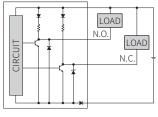

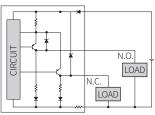

## **Operation Timing Chart**

		Normally ope	n			Normally	closed		
Sensing target		Presence			1	Presence			
		Nothing —				Nothing		L	
Load		Operation			Operation				
Load		Return —			<u> </u>	Return			
Output voltage	NPN	нг				Н			
	output	L				L		L	
	PNP output	Н			1	Н			
		L —			<u> </u>	L			
Operation indicator (yellow)		ON			1	ON			
		OFF —				OFF			

## **Specifications**


Installation	Upper side type
Model	AS80-50D□
Sensing side length	80 mm
Sensing distance	50 mm
Setting distance	0 to 35 mm
Hysteresis	≤ 15 % of sensing distance
Standard sensing target: iron	150 × 150 × 1 mm
Response frequency 01)	30 Hz
Affection by temperature	$\pm~10~\%$ for sensing distance at ambient temperature 20 $^{\circ}\mathrm{C}$
Indicator	Power indicator (green), operation indicator (yellow)
Approval	C€EHI
Unit weight	≈ 470 g

01) The response frequency is the average value. The standard sensing target is used and the width is set as 2 times of the standard sensing target, 1/2 of the sensing distance for the distance.

C==				
1				
Х, Ү,				
Ø 5 mm, 4-wire, 2 m				
(PVC)				

#### **Dimensions**

• Unit: mm, For the detailed dimensions of the product, follow the Autonics web site.

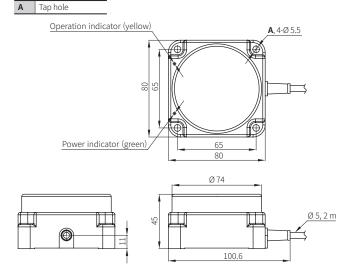


## **Setting Distance Formula**

Detecting distance can be changed by the shape, size or material of the target.

For stable sensing, install the unit within the 70% of sensing distance.

#### Setting distance (Sa)

= Sensing distance (Sn) × 70%

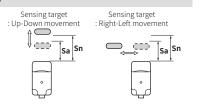

## Mutual-interference & Influence by Surrounding Metals

#### **■** Mutual-interference


When plural proximity sensors are mounted in a close row, malfunction of sensor may be caused due to mutual interference.


Therefore, be sure to provide a minimum distance between the two sensors, as below table.




#### **■** Differential frequency


When sensors are mounted on metallic panel, it must be prevented sensors from being affected by any metallic object except target. Therefore, be sure to provide a minimum distance as below chart.

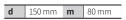

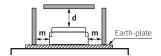

## Sensing Distance Feature Data by Target Material and Size

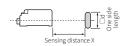

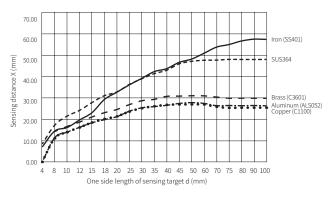

## Sensing Distance Feature Data by Parallel (Left/Right) Movement



